



2011 *Private Use* Application Guide • Volume 12 • Issue 1 • 5-10-11



TOYOTA RAMPVAN® XT

Toyota Rampvan® XT: Engineered for Excellence

Built on the 2011 Toyota Sienna chassis, the BraunAbility Rampvan® XT is the culmination of almost forty years experience in building personal mobility products. Style, performance, convenience and safety have been aesthetically blended to achieve a new level of refinement in a wheelchair-accessible minivan.

Striking and Stylish Exterior - The bold new look of the 2011 Sienna is a refreshing take on the traditional minivan. Strong, athletic lines give this vehicle an entirely new attitude.

Increased Head Clearance - With 56" of door height, the 2011 provides over three additional inches of head clearance over the 2010 model. Customers will love the 60" of interior head clearance for greater comfort and visibility.

Increased Rear Cargo Space - The spare tire is now stored below the rear cargo area, providing much more storage space over the 2010 model. Third row roll-and-tumble seats fold forward to offer additional cargo space when needed.

Step-and-Roll Front Seats - Removing the front seats has never been easier -- just step on the foot lever and roll the seat out of the van.

Fold-Down Footrest - A Braun-designed footrest adds comfort for backseat passengers and folds away when not in use.

Decreased Ramp Angle - The newly designed kneeling system reduces the slope of the ramp to a wheelchair-friendly 7.3 degrees. This makes the Rampvan® XT especially attractive for those in manual wheelchairs.

OEM Remote Control - Accessible features are controlled by the Toyota keyfob (patented by BraunAbility). Additional control switches are conveniently located on the vehicle's interior.

Ground Effects and OEM Styling - The lines of the vehicle are integrated into the custom ground effects, complementing the sleek automotive styling.

Suspension and Ride - We've made only minor modifications to the rear suspension during the conversion process, giving a smooth ride that's as close to OEM as possible.

Safety has always been a top priority at BraunAbility. The Rampvan® XT has been crash tested and certified to meet or exceed all applicable requirements of the Federal Motor Vehicle Safety Standards (FMVSS) and is backed by our 3 year/36,000 mile limited and 5 year/unlimited mile rust-through metal protection on every vehicle that leaves the factory. Add to this the original Toyota warranty for unconverted parts and a nationwide dealer network, and you can rest assured BraunAbility will be there to support you no matter where your travels take you.



Toyota Rampvan® XT Features

Rampvan® XT

2011 Toyota Sienna Chassis ►

SE Model Shown

See Chassis Information page for Chassis Requirements



Lowered Floor

14" lower than conventional minivans, the floor is lowered from the toe pan to the rear axle and provides a choice of three wheelchair securement positions.

◀ Automatic Door

The OEM Toyota power door operator opens the sliding door at the touch of a button.



◀ Automatic Ramp

The lightweight power foldout ramp offers unparalleled ease of access for wheelchair and scooter users.

◀ Custom Ground Effects

Adds stylish lines and enhances smooth OEM appearance.



◀ Automatic Kneeling Rear Suspension

The vehicle features a kneeling system to make boarding even easier. An actuator lowers the rear suspension while the door opens, which reduces the slope of the automatic ramp. The system can be de-activated when desired with the on/off switch.

Integrated Keyfob Remote ►

Control of the vehicle's accessible features is built into the Toyota keyfob remote. Quick-touch operation assures simple, convenient and reliable operation. Two keyfobs are included with the vehicle.



◀ Fold-Down Footrest

Adds comfort for backseat passengers and folds away when not in use.

OEM-Style Switches ►

Operational switches are conveniently located throughout the interior for wheelchair users' convenience. The switches resemble the OEM style and appearance.



◀ Rear Cargo Area

The spare tire is now stored below the rear cargo area. Third row roll-and-tumble seats fold forward to offer additional cargo space when needed.

"Step & Roll" Front Passenger Seats

The driver and passenger seats can be easily removed to provide wheelchair securement positions in the front of the vehicle.





◀ Wheelchair/Occupant Securement System

One belt system is included for use with the floor-mounted tracks.



Toyota Rampvan® XT Dimensions

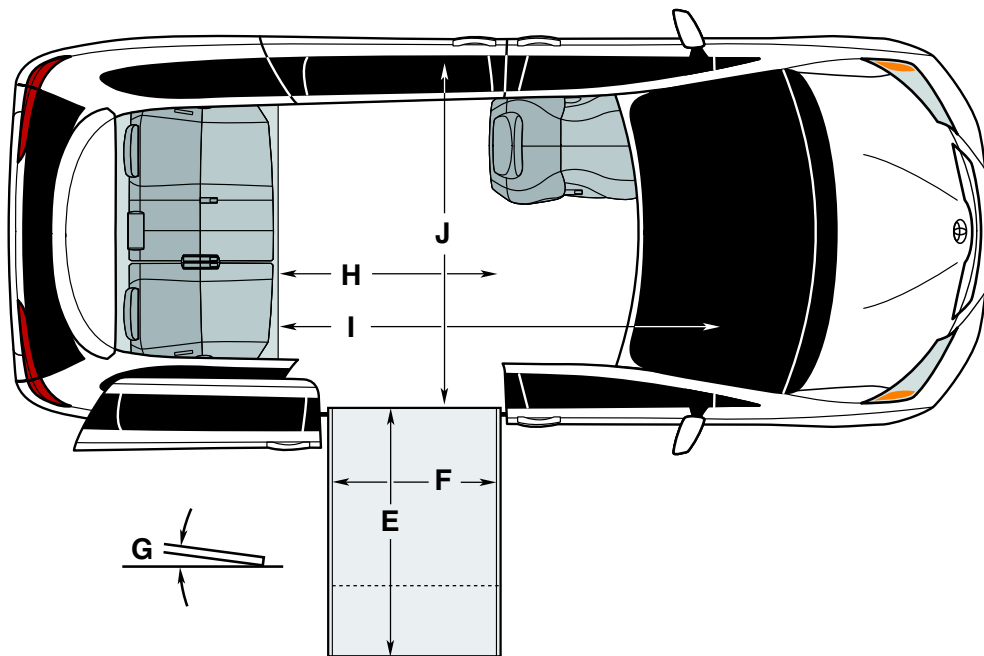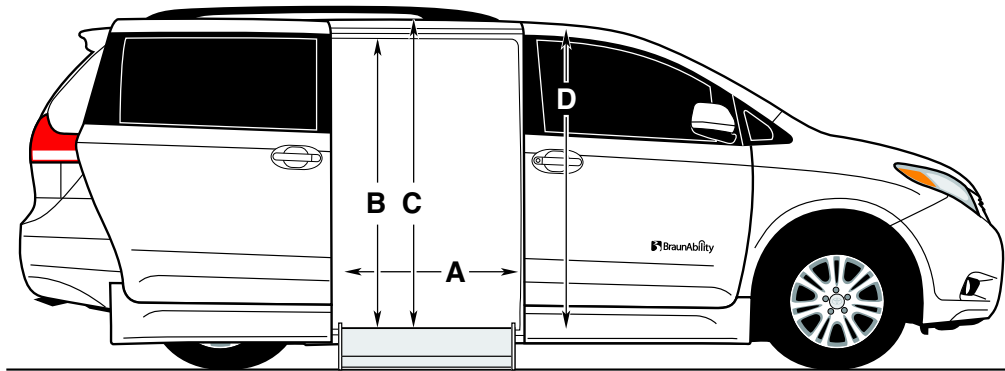

All dimensions are for reference only.

		Foldout Ramp
Door Opening Usable Width (Slide Door)	A	33"
Door Opening Usable Height (Slide Door)	B	56"
Interior Height at Center of Van*	C	60"
Interior Height at Driver and Passenger Position**	D	59"
Ramp Length	E	52"
Ramp Width (Usable Clear Opening)	F	29-1/4"
Ramp Angle (with Vehicle Kneeled)	G	7.3°
Interior Floor Length (Behind Front Seats)	H	51"
Overall Interior Floor Length (Flat Area)	I	82-1/2"
Interior Width at B Pillars	J	61-1/2"

Due to manufacturing tolerances both with the OEM vehicle and the conversion components, all dimensions may vary slightly from those shown.

* Deduct 2-3/4" off of Interior Height for Applications with Overhead DVD/Rail System

** Deduct 3" off of Interior Height for Applications with Moon Roof